


Cutting and fitting instructions Bumpersal 'D'




Fits all standard 75mm T-bar bottom sections of commercial roller doors. It is very quick and easy to fit with no fixings or sealant is required. Supplied in 5m, 10m and 20m rolls.

TOOLS YOU MAY NEED


- Tape measure
- A pair of sharp scissors / Stanley knife
- Pencil

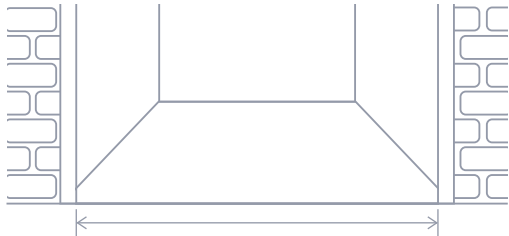


1) With a tape measure, measure the bottom of the roller doors.

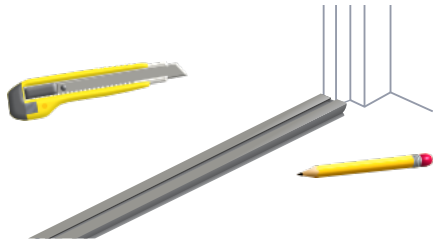


2) Use a pencil to mark the precise length of the rubber seal that requires cutting to fit the opening. Use scissors to trim the door seal accordingly.

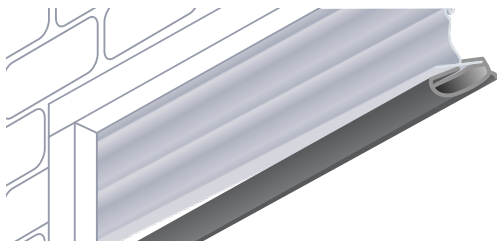

3) With the garage door partially open, starting from one end, press and attach one side of the flap with clips. Repeat this process along the length of the seal.

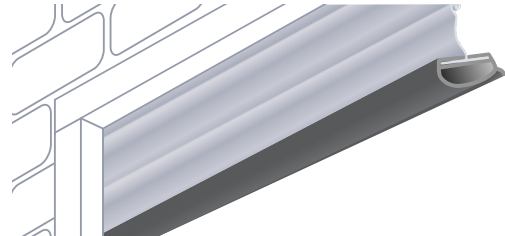

4) Starting from one end, pull back the opposite flap and guide it over the T-bar bottom sections on the roller door. Repeat this process all the way along until completely secured onto the T-bar.

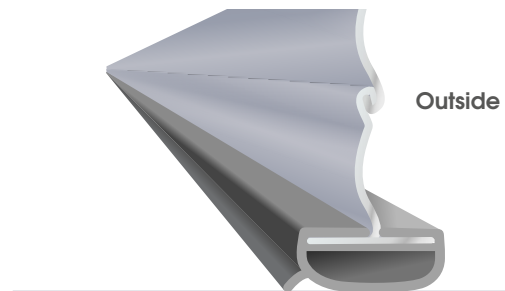

5) Close the roller shutter and ensure that the door closes and locks correctly.

NOTE: Due to coiling, there may be a 'ripple' effect along the bottom of the seal.

Please allow a few days for the product to regain its original extruded shape while in place.

TIP: Having another individual hold the opposite end of the seal will make the task much easier!

**BRUSH STRIPS &
SEALING SYSTEMS**

Formseal Limited

Unit 5
Douglas Park Opal Way
Stone - ST15 0YJ
United Kingdom

+ 44 (0)1785 284808
sales@formseal.co.uk
www.formseal.co.uk