
# Cutting and fitting instructions
# **rubber garage door seal**

The following instructions explain how to cut the rubber insert and aluminium carrier to the required length and fit the seal to your garage door.

### TOOLS YOU MAY NEED

- Tape measure
- Pencil
- Fine-toothed saw or hacksaw
- Large scissors or a sharp Stanley knife
- File, if needed
- Drill or screwdriver
- Suitable fixings for your door

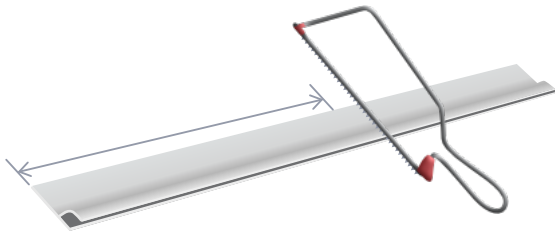


### IMPORTANT


**REMOVE** the rubber insert before cutting the aluminium carrier. **DO NOT CUT** the rubber and aluminium together.

1) **Measure the required length:** Measure the section of the garage door where the seal will be fitted and mark the required length on the aluminium carrier and rubber insert.

2) **Cut the aluminium carrier:** Slide the rubber insert out of the aluminium carrier before cutting. Use a fine-toothed saw or hacksaw to cut the carrier to the required length. File the cut edge if necessary to remove any rough edges.

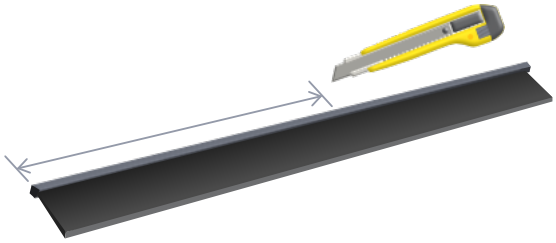

3) **Cut the rubber insert:** Use large scissors or a sharp Stanley knife to cut the rubber insert to the required length. Take care when using a sharp blade.

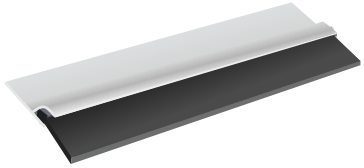

4) **Refit the rubber insert:** Slide the cut rubber insert back into the aluminium carrier, ensuring it is seated correctly along the length of the carrier.

5) **Fix the seal to the door:** Position the carrier where required and secure it using fixings suitable for the door material and installation. Fixings are not supplied, as the appropriate type depends on the application.

6) **Check the fit:** Ensure the rubber makes firm contact with the surface it is intended to seal against. Avoid over-flexing the seal and check that the garage door opens and closes correctly.

### HELPFUL TIPS

- If the rubber insert is difficult to slide back into the carrier, check the cut edge for burrs and file it lightly if needed.
- Check the seal's position before drilling or fixing the carrier in place.
- Choose fixings suitable for the material you are attaching the carrier to.

### SAFETY PRECAUTIONS

Wear suitable eye protection when cutting the aluminium carrier. Take care when using a saw or sharp knife, and always follow the tool manufacturer's safety instructions.

**BRUSH STRIPS &**
SEALING SYSTEMS

**Formseal Limited**
Unit 5
Douglas Park Opal Way
Stone - ST15 0YJ
United Kingdom

+ 44 (0)1785 284808
sales@formseal.co.uk
**www.formseal.co.uk**

© Formseal Limited